

Frit-Casted Zinnia

Art Glass Supplies

Create Inspire Fuse

Materials:

- LF153 Zinnia Flower
- COE90 Frits (See Right)
- Suitable Glass Separator/ZYP
- Frit Placement Tools

Powder Frits:

- Canary Yellow
- Light Sky Blue

Fine Frits:

- Ruby Pink Tint
- Neo Lavender Opal
- Pink Opal

Medium Clear



Step 1: Prepare your mold thoroughly with glass separator. We recommend spray-on ZYP. Always wear a mask when using spray-on separator and/or powder frits.



Step 2: Fill the center with Fine Ruby Pink Tint. A cut plastic pipette was used here to place frit.




Step 3: Place a ring of Powder Canary Yellow around the center.




Step 4: Add a ring of Powder Light Sky Blue around the edge of the petals. An Enamel Sifter was used here.



Step 5: Back the petals with Fine Neo Lavender Opal.

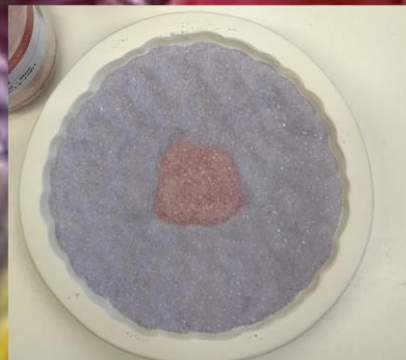

Step 6: Back the center with Fine Pink Opal.

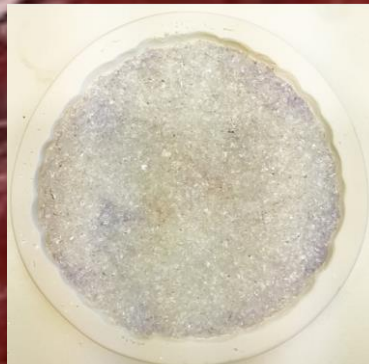

Step 7: Fill the remainder of the mold with Medium Clear. If using fill weights, fill until holding 256 grams.

Step 8: Fire to a Full Fuse using the suggested schedule in **Table 1** or your own favorite Full Fuse.

*Before firing, it's important to know your kiln. For tips on how to do that, [please click here to see our Important Firing Notes!](#)

Table 1: Full Fuse*

Segment	Rate	Temp (°F)	Hold
1	275	1215	30
2	50	1250	30
3	275	1465	10
4	9999	900**	60

**If using COE96, adjust this to 950°F

If you would like to slump your finished Zinnia into a bowl or stemmed glass flower, [follow the instructions found on Page 2 of our Hibiscus tutorial by clicking here!](#)